

Overview

This smart aroma diffuser integrates intelligent control, multi-mode operation, and visual status display, designed to meet users' refined and convenient device management needs. Please read this manual carefully before use, or scan the QR code to watch operation videos.

◇ HD Display: Shows real-time time, operating status, oil level, and other key data for clear device monitoring.

◇ Dual Wireless Connection: Supports Bluetooth for local control and WiFi for remote app control, breaking spatial limits.

◇ Customizable Modes: Up to 5 user-defined modes with flexible work/pause schedules to suit diverse scenarios.

◇ User-Friendly Features: Button lock/unlock prevents misoperation; independent control of device status and fan enhances convenience.

◇ Intelligent Reminders: Real-time oil level detection alerts maintenance needs; buzzer and multi-color indicators clearly confirm operations and status changes.

Ideal for home daily use and commercial device management, this diffuser delivers efficient, worry-free experiences with stable performance, easy operation, and smart design.


PRODUCT INFORMATION		
Size: 289×166×357mm	Weight: 6.3Kg	Power: 15W
Input: AC 110V/220V	Capacity: 1000ml	Coverage: 5000-8000m ³

WHAT'S INCLUDED				
Scent Diffuser (with bottle) x1	Power adapter x1	Gasket x1	Atomizer core x1	Magnetic card x1
External connecting tube x1	Wrench x1	Quick-connect fitting x1	User Manual x1	After-sales card x1

1

Installation


Unlock the atomizer head with the magnetic card, then take out the entire atomizer head. Next, unscrew the essential oil bottle in the direction of the arrow, add an amount of essential oil, and then reassemble them back into the device.

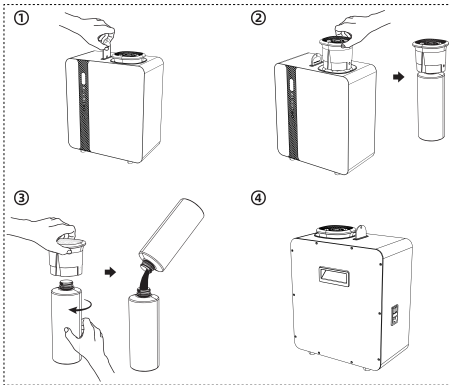

Warning: Keep the device upright at all times after adding oil. Tilting or inverting may damage internal components.

2

Button Control

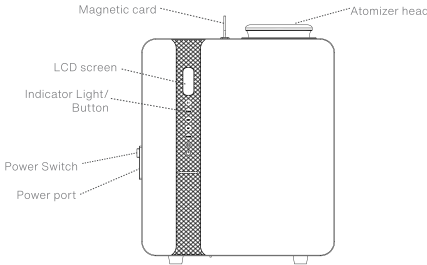

● Sound prompt

The device emits a "beep" when receiving signals or upon any valid button operation.


● Factory Reset

Long - press the MODE button for 5 seconds to restore the factory settings, and the buzzer will sound three times.

Factory - set parameters: 60 seconds on, 200 seconds off, operating time Monday to Sunday from 08:00 to 22:00.

● **Button Lock** | Press and hold the SET button for 3 seconds to toggle button lock/unlock, and the buzzer will sound three times.

2.1 Power/Ambient Light Button

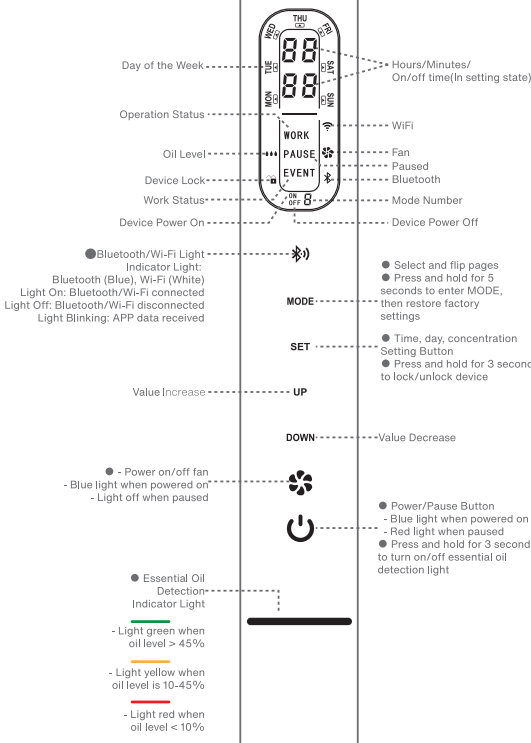

2.2 system time settings

-Press the [SET] button for the first time to enter the hour setting. The hour digits will flash, adjust the hour time by pressing the [UP/DOWN] buttons.

-Press the [SET] button for the second time, the hour is confirmed and set, and move to the minute setting. The minute digits will flash, adjust the minute time by pressing the [UP/DOWN] buttons.

-Press the [SET] button for the third time, the minute is confirmed and set, and move to the workday setting. The workday digits will flash, adjust the workday time by pressing the [UP/DOWN] buttons.

-Press the [SET] button for the fourth time, confirm that the system time setting is complete.

2.3 working mode settings

A First, press the [MODE] button, the LCD display shows the factory setting time, this machine can set 5 working modes. For example: set 8 am-10 am, 11 am-12 pm, 1 pm-2 pm. Crossing over 00:00, set two time periods, such as the first period 08:00-23:59, the second period 00:01-06:00.

The first time you press the [SET] button, you enter the start time setting for the first time period, the hour digits flash, and you adjust the hour by pressing the [UP/DOWN] buttons.

Press the [SET] button for the second time, the hour setting is completed. The minute digits flash. Adjust the minute by pressing the [UP/DOWN] buttons.

Upon the third press of the [SET] button, the minute setting is completed, and move to set the work day. Pressing the [UP] button once will display the symbol "▲" at the top of the LCD screen in the day of the week column, indicating that the workday is selected. If "▲" is not displayed, it means it is not selected. Then press [DOWN] to move right and continue setting other day combinations.

B Press the [MODE] button for the second time to set the off time. The first press of the [SET] button enter the setting of hour, adjust the hour by pressing the [UP/DOWN] buttons; the second press of the [SET] button completes the hour setting, and the minute digits begin to blink, adjust the minute by pressing the [UP/DOWN] buttons.

C Press the [MODE] button for the third time to enter the spray duration (intensity setting). Adjust the intensity by pressing the [UP/DOWN] buttons, select the appropriate intensity, with each press adjusting the duration by 5 seconds, the maximum value is 200 seconds, and the minimum value is 5 seconds.

3

App Control

Important Notes:

◇ Enable app permissions (location, Bluetooth, camera) for full functionality.

◇ Keep the device and phone within Bluetooth/WiFi range when first adding the device (WiFi only supports 2.4GHz band).

◇ The device switches to app mode immediately after Bluetooth/WiFi connection, running on app-set parameters.

◇ Bluetooth mode supports direct connection without login; custom settings are stored locally on the phone.

◇ Interface may vary due to app updates or device features (e.g., no oil detection, ambient light).


◇ Troubleshooting: If app fails to connect, check Bluetooth/WiFi is on, reset the device to factory settings, and re-add.

3.1 App Installation

Scan the QR code to download "Scent Mate" , or search for "Scent Mate" on Google Play/App Store to install.



Scan the QR code to download app

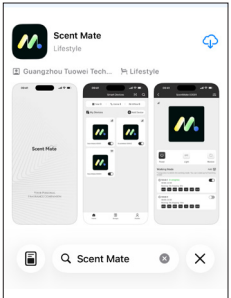

3.2 Account Creation & Device Addition

Add Device ≈
Turn on the delightful fragrance



Bluetooth

WiFi Mode

4G Mode

WiFi Mode:


➤ Power on the diffuser.

➤ Open the app, go to the start page, and tap "WiFi Mode".


➤ Register and log in with a phone number or email.

➤ On the home page, tap "Add Device - WiFi" and choose one of 3 methods: scan QR code, Bluetooth mode, or WiFi mode.

➤ Connected devices appear in "My Devices"; offline devices show as gray.

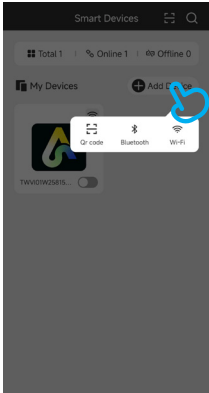

3.3 Device Details Page

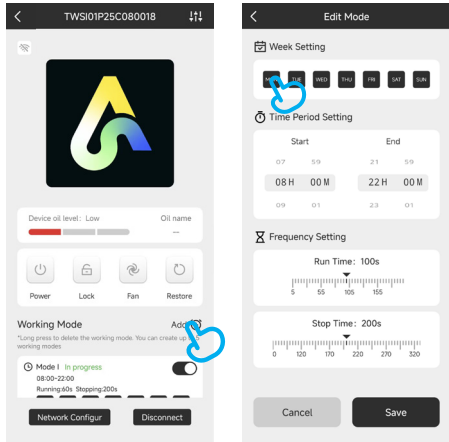

More Settings:
Customize the device name, set an avatar, create a connection password, or remove connected devices.

Status & Timer:
 Oil level: Displays current oil volume; scent name can be customized.

Power switch: One-tap to turn the device on/off.

Button Lock: One-tap to toggle button lock/unlock.

Fan switch: One-tap to turn the fan on/off.

Factory reset: One-tap to restore default settings.


Work Modes:
Tap "Add" to create up to 5 modes. Toggle the switch to enable/disable; long press to delete. Tap a mode to edit:

Week Selection: Tap to select applicable days.

Time Slots: Swipe the dial to set work times. Note: Overnight schedules (e.g., 23:00–02:00) must be split into two segments: 23:00–23:59 and 00:00–02:00.

Frequency: Swipe the dial to set pump run/pause cycles.

3.4 Group Management & Personal Center

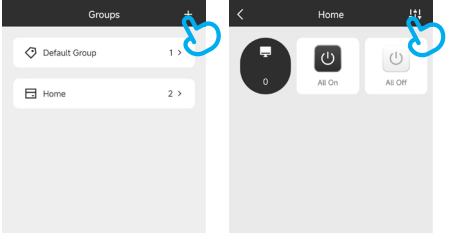


Group Management:
- Devices are automatically added to the "Default Group" after connection. Create custom groups for unified management:
- Toggle all devices in the group on/off.
- Rename, delete groups, or remove devices.

- Batch share devices, set work modes, and customize scent names.

- Add ungrouped devices to the group.

3.5 Personal Center:

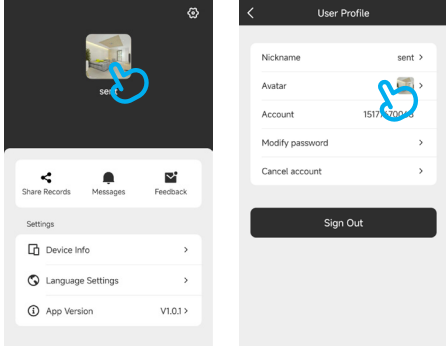

- Edit personal information via avatar.
- View sharing records, manage message notifications, and submit feedback.
- Access device info, user guides, and warranty terms.
- Switch languages and check app version.

4 Oil Consumption Chart

Grade	On time(s)	Pause time(s)	Consumption (g/h)
Minimum concentration	5s	600s	0.11
Medium concentration	100s	300s	3.24
Maximum concentration	200s	20s	11.78
100% Text	Continuous On	0	12.96

Note: Data tested with Park Hyatt essential oil (density ≈0.95). Consumption varies by oil type; for reference only.

5 Maintenance

Regular Cleaning (Every 1–2 Months):

Nozzle Cleaning: Wipe the nozzle with a 95% alcohol-dampened cotton swab to remove oil residue.

Atomizing Core Cleaning: Scrub with an alcohol-dampened swab or soak in alcohol, then air-dry.

Oil Bottle Cleaning: Clean with alcohol and fully dry before switching to a different oil type.

Long-Term Storage:

Add 95% industrial alcohol to the empty bottle.

Run the device for 10–15 minutes.

Drain the alcohol, air-dry the bottle, and reassemble.

Unplug the power cord to avoid electrostatic damage.


6 Atomizing Core Replacement

Twist out the oil bottle, pull out the oil suction tube.

Use tweezers to remove the old atomizing core.

Install the new core, reinsert the suction tube (align with the core hole), and reassemble all parts.

Note: Ensure all parts are tightly secured to prevent falling off.

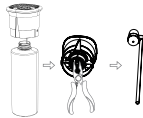

7 Warranty Terms

Warranty Period: 1 year from the date of purchase.

Free Warranty Coverage: Manufacturing defects under normal use; covers service and parts (excludes essential oil consumables).

Claims Process: Contact after-sales service within the warranty period and provide a valid warranty card and original/copy of the commercial invoice.

Exclusions from Free Warranty:

- Damage from accidents (fire, earthquake, dropping, etc.).
- Malfunctions caused by improper operation or unsuitable environments.
- Damage from unauthorized repairs or part replacements.
- Damage during transportation after delivery.
- Invalid or altered warranty documents.
- Lack of regular maintenance and cleaning.
- Overload operation beyond specifications.
- Non-genuine products, consumables, or parts.
- Products sold through unauthorized channels.
- Devices sent for repair without prior confirmation with the manufacturer.

Safety Precautions

General Safety

- Keep the device upright at all times after adding oil; tilting or inverting may damage internal components.
- Empty the oil bottle before transportation to avoid leaks and device damage.
- Not for humidification; do not add water.
- Keep out of reach of children and pets.
- Store in a dry, cool place; avoid high temperatures or humidity.

Prohibited Actions

- Do not cover the device during operation.
- Do not use overloaded power sockets, damaged cords, or plugs (risk of device damage or fire).
- Do not ingest essential oil; avoid eye contact. Rinse with plenty of water if contact occurs; seek medical help if irritation persists.
- Do not disassemble the device. Contact after-sales service if any abnormality is found.

User Manual

Smart
Scent Diffuser



LCD

Scent machine

