

TW-SI01有屏蓝牙款说明书，70×110mm

Restore factory instruction

Long press the 【MODE】 button for 5 seconds to restore factory settings, with the factory settings parameters being: the air pump defaults to running for 60 seconds and stopping for 200 seconds, and the time is set from Monday to Sunday, 08:00-22:00.

Set the system time by buttons

◆ Press the 【SET】 button for the first time to enter the hour setting. The hour digits will flash, adjust the hour time by pressing the 【UP/DOWN】 buttons.

◆ Press the 【SET】 button for the second time, the hour is confirmed and set, and move to the minute setting. The minute digits will flash, adjust the minute time by pressing the 【UP/DOWN】 buttons.

◆ Press the 【SET】 button for the third time, the minute is confirmed and set, and move to the workday setting. The workday digits will flash, adjust the workday time by pressing the 【UP/DOWN】 buttons.

◆ Press the 【SET】 button for the fourth time, confirm that the system time setting is complete.

Button settings for working mode (total of 5 groups)

A First, press the 【MODE】 button, the LCD display shows the factory setting time, this machine can set 5 working modes. For example: set 8 am-10 am, 11 am-12 pm, 1 pm-2 pm. Crossing over 00:00, set two time periods, such as the first period 08:00-23:59, the second period 00:01-06:00. The first time you press the 【SET】 button, you enter the start time setting for the first time period, the hour digits flash, and you adjust the hour by pressing the 【UP/DOWN】 buttons. Press the 【SET】 button for the second time, the hour setting is completed. The minute digits flash. Adjust the minute by pressing the 【UP/DOWN】 buttons. Upon the third press of the 【SET】 button, the minute setting is completed, and move to set the work day. Pressing the 【UP】 button once will display the symbol "▲" at the top of the LCD screen in the day of the week column, indicating that the workday is selected. If "▲" is not displayed, it means it is not selected. Then press 【DOWN】 to move right and continue setting other day combinations.

04

MAINTENANCE AND UPKEEP

Scent diffusers require regular cleaning and maintenance every 1-2 months when in normal use. Below is the method for cleaning.

① Spray nozzle cleaning:

◆ Use 95% "alcohol + cotton swab" to gently wipe the nozzle, removing the residue of essential oil liquefaction

◆ Cleaning the atomizer core can be cleaned by soaking a cotton swab in 95% alcohol and wiping the core with it, or by soaking the atomizer core in alcohol and then allowing it to dry.

② Oil bottle cleaning:

◆ Before changing essential oils each time, clean the oil bottle with alcohol and allow it to dry completely.

When equipment is not used for a long period, it is necessary to clean the internal nozzles and other components thoroughly.

◆ Add 95% industrial alcohol to the empty bottle.

◆ Turn on the device and run it for 10-15 minutes.

◆ Turn off the device, pour out the alcohol from the bottle and let it dry before reassembling the device.

◆ Power off storage, unplug the power supply, to prevent electrostatic damage to the circuit.


05

REPLACE ATOMIZER COMPONENTS

The atomizer head assembly is divided into: Atomizer head, Atomizer components ,and essential oil bottle.

Operation steps: Unscrew the essential oil bottle and wipe it clean with a dry cloth.Remove the atomizer components, then insert the new atomizer components back into the device.

(Note: Press all components firmly to prevent detachment.)

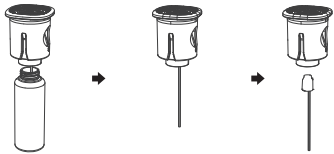

06

CONCENTRATION & CONSUMPTION

Grade	Work time/s	Stop time/s	Consumption(g/h)
Minimum	5s	600s	0.01
Medium	100s	300s	0.40
Maximum	200s	20s	1.44
100% On Text	Fully Open	0	1.58

1. The above data is based on the test essential oilused: Park Hyatt (density ≥0.95).

2. The above data is for reference only, and the amount of atomization produced by different essential oils will be different.

08

09

! SAFETY PRECAUTIONS FOR USE

Safe use:

①After loading the essential oil, the device must always remain upright and facing upwards, not inverted or tilted, otherwise it may damage the internal components of the device.

②During the transportation of the equipment, it is necessary to empty the essential oils from the bottles to avoid oil leakage and damage to the equipment.

③This device cannot be used for air humidification and cannot be filled with water;

④Please place it in a location inaccessible to children and pets.

⑤Store in a dry and cool place, do not use this device in high temperature or humid environments.

Forbidden:

①Do not cover the equipment in use.

②Prohibit the use of overloaded power outlets, power cords, or damaged power plugs, as this may damage equipment or even cause fires.

③Essential oils should not be ingested and should be kept away from contact with the eyes. In case of eye contact, rinse thoroughly with plenty of water; if there is a strong sensation, seek medical attention immediately.

④Please do not disassemble the equipment. If any abnormalities are found in the product, please contact us promptly.


07

User Manual

SMART AROMA SCENT DIFFUSER

LCD/PVC-LCD

Scent machine

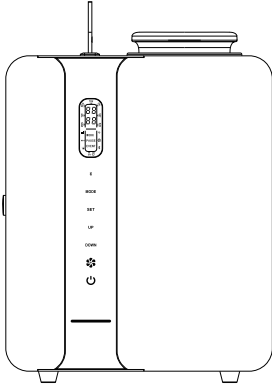

[Please read the manual carefully before use and keep it properly]

Please read and follow the instructions carefully. You may also scan the QR code below to view the operation video:



Scan the QR code to download the app



Equipment Operation Video



Equipment after-sales Video

PRODUCT INFORMATION

Size: 190×92×245mm	Weight: 2.1kg	Power: 6W
Input:DC 12V/1A	Capacity:200ml	Coverage:300-500m³

PACKAGING ACCESSORIES


Scent Diffuser × 1 (Contains essential oil bottle)	Power adapter × 1	User Manual × 1	Magnetic Card × 1
Atomizer components × 1	Backup rubber seal × 1	After-sales card × 1	

01

01

INSTALLATION INSTRUCTIONS

Use the magnetic card to unlock the atomizer head, then manually remove the entire atomizer head. Next, unscrew the essential oil bottle in the direction of the arrow, add an appropriate amount of essential oil, and reassemble all components into the device.

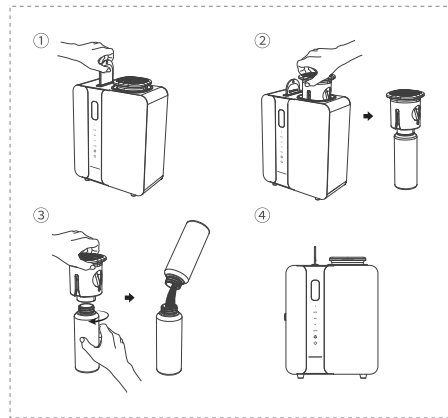

Warning: After loading essential oils, the device must always remain upright and facing upwards, not inverted or tilted, otherwise it may damage the internal components of the device.

02

02

APP CONTROL(BLUETOOTH MODE)



After Bluetooth connection, the device immediately switches to Bluetooth mode and operates according to the Bluetooth settings:
Scan the QR code with your phone to download and install the "Art Diffuser" APP → Run the APP → Select "Start Adding" → Go to the "Search and Connect" page, search for and connect to the device.
You can also click the "Scan" icon in the upper right corner to scan the Bluetooth QR code on the device to connect it.

Note:It is recommended to allow all APP permissions, including location services, Bluetooth connection, and sending notifications.

◆ **All devices** | Available devices within the phone's Bluetooth range are displayed in the "All Devices" group, click on any device icon to connect to that device, after successful connection, it will jump to the device details page.

◆ **My Devices** | Devices that have been connected are displayed in the "My Devices" group, devices not currently within Bluetooth range are shown in gray.

03

◆ Device Status Page

Device oil level:Displays the current essential oil level in the device.
Device oil fragrance:Displays the essential oil fragrance type and supports setting the oil name.
Switch: The mobile phone can turn on/off the device operation status with one press.
Lock: The phone can turn on/off the device lock with one press.
Fan: The mobile phone can turn on/off the fan with one press.
Reset: The phone can be reset to factory settings with a single button press.

◆ **Working Mode** : You can create 5 work modes, click on the mode window, and you can customize and edit the day of the week, time period, and frequency.

① **Day Setting**: Select the desired days

② **Time Period Setting**: Adjust the dial to select the working time period.

Note: If the time period needs to cross 00:00, it must be set as two consecutive time periods (the end time cannot be less than the start time), for example, 23:00~02:00, set as two groups: 23:00~23:59, 00:00~02:00.

③ **Frequency Setting**: Adjust the dial to select the working frequency.


Operating time range: 5~200 seconds; Pause time range: 20~600 seconds.

◆ More Settings:

① Change device name & avatar(this setting can only be saved locally on the phone)
② Bluetooth password setting:Set a password for Bluetooth device connection. Anyone connecting to the device next time will need to enter the password. If no password is required, click "No Password".
③ Delete Device:Disconnect the Bluetooth connection of the device and remove it from the history in the "My Devices" section.


03

INDICATOR LIGHT / BUTTON

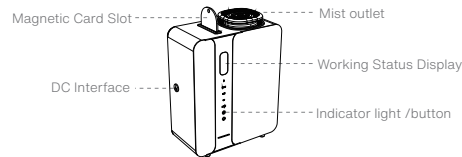

04

Indicator & Screen & Button instruction

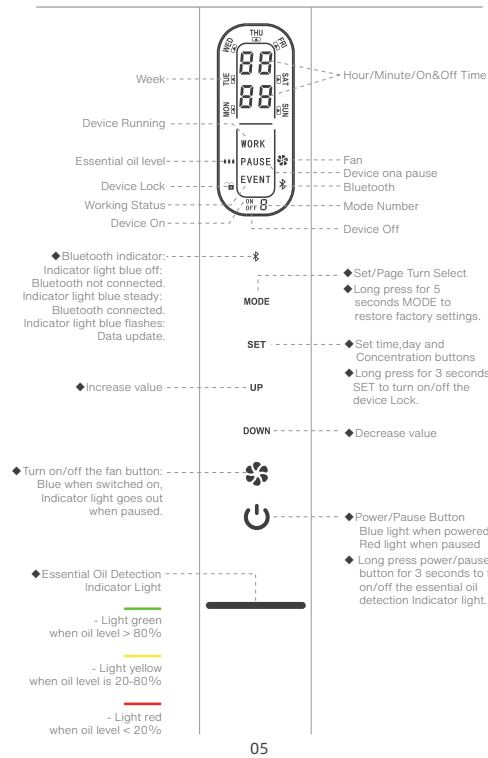

05