

TW-SP01面盖2无屏款说明书 280x110mm 4折页

◆ **Device Status Page**
Switch: The mobile phone can turn on/off the device operation status with one press.
Fan: The mobile phone can turn on/off the fan with one press.
Reset: The phone can be reset to factory settings with a single button press.

◆ **Working Mode:** You can create 5 work modes, click on the mode window, and you can customize and edit the day of the week, time period, and frequency.

① **Day Setting:** Select the desired days.

② **Time Period Setting:** Adjust the dial to select the working time period.

Note: If the time period needs to cross 00:00, it must be set as two consecutive time periods (the end time cannot be less than the start time), for example, 23:00~02:00, set as two groups: 23:00~23:59, 00:00~02:00.

③ **Frequency Setting:** Adjust the dial to select the working frequency.
Operating time range: 5~200 seconds; Pause time range: 20~600 seconds.

◆ **More Settings:**
① Change device name & avatar(this setting can only be saved locally on the phone)
② Bluetooth password setting:Set a password for Bluetooth device connection, Anyone connecting to the device next time will need to enter the password. If no password is required, click "No Password".
③ Delete Device:Disconnect the Bluetooth connection of the device and remove it from the history in the "My Devices" section.

05

MAINTENANCE AND UPKEEP

Scent diffusers require regular cleaning and maintenance every 1-2 months when in normal use. Below is the method for cleaning.

① Spray nozzle cleaning:
◆ Use 95% "alcohol + cotton swab" to gently wipe the nozzle, removing the residue of essential oil liquefaction
◆ Cleaning the atomizer core can be cleaned by soaking a cotton swab in 95% alcohol and wiping the core with it, or by soaking the atomizer core in alcohol and then allowing it to dry.
② Oil bottle cleaning:
◆ Before changing essential oils each time, clean the oil bottle with alcohol and allow it to dry completely.

When equipment is not used for a long period, it is necessary to clean the internal nozzles and other components thoroughly.


◆ Add 95% industrial alcohol to the empty bottle.
◆ Turn on the device and run it for 10-15 minutes.
◆ Turn off the device, pour out the alcohol from the bottle and let it dry before reassembling the device.
◆ Power off storage, unplug the power supply, to prevent electrostatic damage to the circuit.

05

05

REPLACE ATOMIZER COMPONENTS

The atomizer head assembly is divided into: Atomizer head, Atomizer components ,and essential oil bottle.
Operation steps: Unscrew the essential oil bottle and wipe it clean with a dry cloth,Remove the atomizer components, then insert the new atomizer components back into the device.
(Note: Press all components firmly to prevent detachment.)

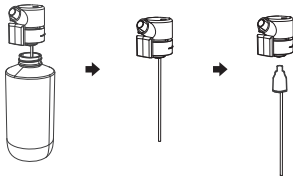

06

CONCENTRATION & CONSUMPTION

Grade	Work time/s	Stop time/s	Consumption(g/h)
Minimum	5s	600s	0.02
Medium (Default Level)	60s	200s	0.48
Maximum	200s	20s	1.9
100% On Text	Fully Open	0	2.1

1. The above data is based on the test essential oilused: Park Hyatt (density ≥0.95).
2. The above data is for reference only, and the amount of atomization produced by different essential oils will be different.

06



SAFETY PRECAUTIONS FOR USE

Safe use:

①After loading the essential oil, the device must always remain upright and facing upwards, not inverted or tilted, otherwise it may damage the internal components of the device.
②During the transportation of the equipment, it is necessary to empty the essential oils from the bottles to avoid oil leakage and damage to the equipment.
③This device cannot be used for air humidification and cannot be filled with water.
④Please place it in a location inaccessible to children and pets.
⑤Store in a dry and cool place, do not use this device in high temperature or humid environments.

Forbidden:

①Do not cover the equipment in use.The power socket or adapter should not be placed above the mist outlet to prevent long-term infiltration of essential oil spray from corroding the adapter and causing power damage.
②Prohibit the use of overloaded power outlets, power cords, or damaged power plugs, as this may damage equipment or even cause fires.
③Essential oils should not be ingested and should be kept away from contact with the eyes. In case of eye contact, rinse thoroughly with plenty of water; if there is a strong sensation, seek medical attention immediately.
④Please do not disassemble the equipment. If any abnormalities are found in the product, please contact us promptly.


07

User Manual

SCENT DIFFUSER

SP01-II-Basic

Scent machine

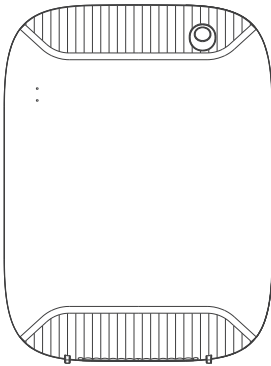

[Please read the manual carefully before use and keep it properly]

08

绘制	客户代码	物料名称	规格/mm	材质/工艺	版本/日期	审核	备注
		TW-SP01面盖2无屏款说明书	280×110	四折页风琴折 157克铜版纸	2026 0112		

Please read and follow the instructions carefully. You may also scan the QR code below to view the operation video:



Scan the QR code to download the app



Equipment Operation Video



Equipment after-sales Video

PRODUCT INFORMATION

Size:158×78×212mm	Weight:810g	Power:5W
Input:DC 12V/1A	Capacity:400ml	Coverage:500-1000m³


PACKAGING ACCESSORIES

Scent Diffuser(Contains essential oil bottle) × 1	Power adapter × 1	User Manual × 1	After-sales card × 1
Key × 2	Wall-mounted hooks × 1	Backup rubber seal × 1	Atomizer components × 1

01

INSTALLATION INSTRUCTIONS

First, use the key to unlock, then press down on the keyhole position to open the front cover. After that, remove the atomizer head and essential oil bottle together outward. Add an appropriate amount of essential oil and then reinstall the components into the device.

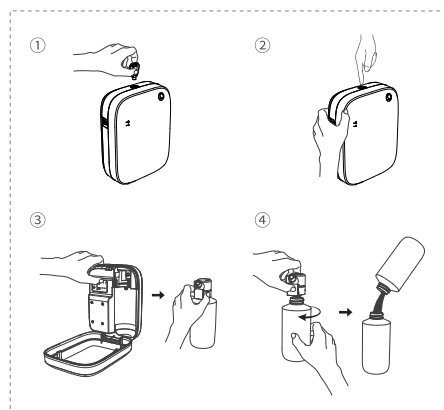


Wall-mounted: First, fix the wall hooks to the wall, then hang the device along the screw position on the back panel hole.

Warning: After loading essential oils, the device must always remain upright and facing upwards, not inverted or tilted, otherwise it may damage the internal components of the device.

02

INDICATOR LIGHT / BUTTON

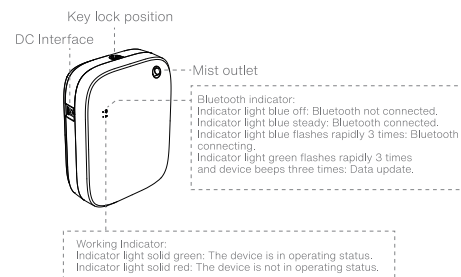


Button diagram illustration

- ◆ Press the concentration level button: Switch the concentration level
 - Level 1: On for 30s, off for 300s, one light on
 - Level 2: On for 60s, off for 300s, two lights on
 - Level 3: On for 120s, off for 300s, three lights on

- ◆ Press the power button: Turn the device on/off
- ◆ Long press for 5 seconds power button to restore factory settings.

- ◆ Press the timer level button: Switch the timer level
 - Level 1: 1-hour timer, blue light "1h" on
 - Level 2: 4-hour timer, blue light "4h" on
 - Level 3: 8-hour timer, blue light "8h" on
 - Level 4: 24-hour timer, blue light "24h" on



Restore factory instruction

Press and hold the power button for 5 seconds to restore factory settings, the air pump defaults to running for 60 seconds and stopping for 300 seconds, and timing duration is 4 hours.

03

APP CONTROL(BLUETOOTH MODE)



After Bluetooth connection, the device immediately switches to Bluetooth mode and operates according to the Bluetooth settings.
Scan the QR code with your phone to download and install the "Art Diffuser" APP → Run the APP → Select "Start Adding" → Go to the "Search and Connect" page, search for and connect to the device.
You can also click the "Scan" icon in the upper right corner to scan the Bluetooth QR code on the device to connect it.

Note: It is recommended to allow all APP permissions, including location services, Bluetooth connection, and sending notifications.

◆ **All devices** | Available devices within the phone's Bluetooth range are displayed in the "All Devices" group, click on the corresponding device model to connect to it, it will jump to the device details page.

◆ **My Devices** | Devices that have been connected are displayed in the "My Devices" group, click to connect the device. After successful connection, it will jump to the device details page.

04