

Overview

This smart aroma diffuser integrates intelligent control, multi-mode operation, and visual status display, designed to meet users' refined and convenient device management needs. Please read this manual carefully before use, or scan the QR code to watch operation videos.

◊ HD Display: Shows real-time time, operating status, oil level, and other key data for clear device monitoring.

◊ Dual Wireless Connection: Supports Bluetooth for local control and WiFi for remote app control, breaking spatial limits.

◊ Customizable Modes: Up to 5 user-defined modes with flexible work/pause schedules to suit diverse scenarios.

◊ User-Friendly Features: Button lock/unlock prevents misoperation; independent control of device status and fan enhances convenience.

◊ Intelligent Reminders: Real-time oil level detection alerts maintenance needs; buzzer and multi-color indicators clearly confirm operations and status changes.

Ideal for home daily use and commercial device management, this diffuser delivers efficient, worry-free experiences with stable performance, easy operation, and smart design.

Product Informations		
Size: 154×130×568mm	Weight: 4.6Kg	Power: 11W
Input: DC 12V/2A	Capacity: 1000ml	Coverage: 1500-3000m³

Package Contents						
						
Scent Diffuser (with bottle) x1	Power adapter x1	Gasket x1	Atomizer core x1	Magnetic keyx1	After-sales card x1	User Manual x1



Equipment Operation Video




Equipment after-sales Video

Installation

- Attach the magnetic lock key to the left-side magnetic lock mark to unlock the atomizing head, then pull it upward to remove.


- Twist the oil bottle out along the arrow direction, add essential oil, then reassemble all parts back to the diffuser.

- Connect to power to start operation.

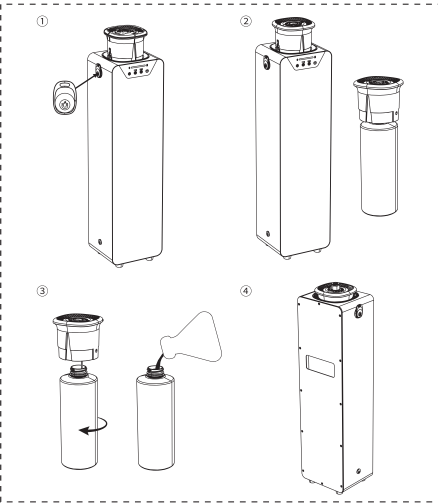

Warning: Keep the device upright at all times after adding oil. Tilting or inverting may damage internal components.

Sound, Buttons & Indicators

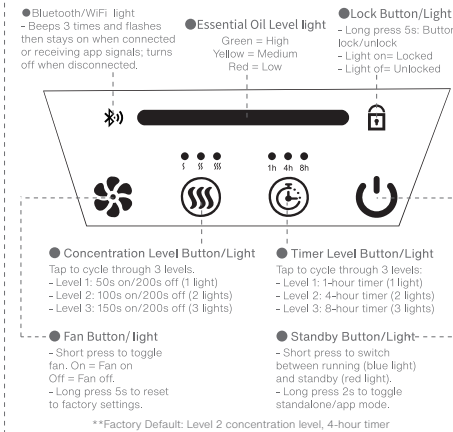

2.1 Sound Responses

Power on: 1 beep

Button unlocked: 1 beep per button press

Bluetooth/WiFi connected or app data received: 3 beeps

Factory reset, button lock/unlock, fan on/off: 3 beeps

2.2 Indicators

Power Button Light:  Blue when working,  red when paused.

Device Lock Light:  On when locked, off when unlocked.

Fan Light:  On when turned on, off when turned off.

Bluetooth/WiFi Indicator:

Bluetooth: Flashes  blue 3 times then stays on; off when disconnected; flashes 3 times during data update.

WiFi: Flashes  white 3 times then stays on; flashes 3 times during data update.

2.3 Button Control (Standalone Mode)

Standalone mode only supports button operation.

Power Button: Long press for 2 seconds to switch between standalone mode and app mode (defaults to standby when powered on).

Working status: Short press to pause (pump stops, red indicator on).

Paused status: Short press to start (pump runs, blue indicator on).

Intensity Level Button: Short press to switch levels (default: Level 2).

Level 1	Runs 50s, pauses 200s	  1 blue light on
Level 2	Runs 100s, pauses 200s	  2 blue lights on
Level 3	Runs 150s, pauses 200s	  3 blue lights on

Timer Level Button: Short press to switch timers (default: Level 2).

Level 1	1-hour timer	  1 blue light on
Level 2	4-hour timer	  2 blue lights on
Level 3	8-hour timer	  3 blue lights on

Fan Button: Short press to turn fan on/off.

- On: Fan starts with pump, stops 4 seconds after pump stops.

- Off: Fan remains off regardless of pump status.

Factory Reset: Long press fan button for 5 seconds (resets to standalone mode, Level 2 intensity, Level 2 timer, fan on).

Device Lock: Long press lock button for 5 seconds to enable/disable lock (all buttons except lock button are invalid when locked).

Oil Level Indicator:

High level	Green light bar 
Medium level	Yellow light bar 
Low level	Red light bar 

3

App Control

Important Notes:

◊ Enable app permissions (location, Bluetooth, camera) for full functionality.

◊ Keep the device and phone within Bluetooth/WiFi range when first adding the device (WiFi only supports 2.4GHz band).

◊ The device switches to app mode immediately after Bluetooth/WiFi connection, running on app-set parameters.

◊ Bluetooth mode supports direct connection without login; custom settings are stored locally on the phone.

◊ Interface may vary due to app updates or device features (e.g., no oil detection, ambient light).


◊ Troubleshooting: If app fails to connect, check Bluetooth/WiFi is on, reset the device to factory settings, and re-add.

3.1 App Installation

Scan the QR code to download "Scent Mate" , or search for "Scent Mate" on Google Play/App Store to install.



Scan the QR code to download app

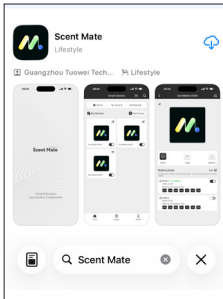

3.2 Account Creation & Device Addition


Add Device 
Turn on the delightful fragrance



Bluetooth 

Wifi Mode 

4G Mode 

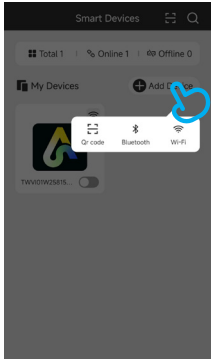

WiFi Mode:

➤ Power on the diffuser.


➤ Open the app, go to the start page, and tap "WiFi Mode".

➤ Register and log in with a phone number or email.

➤ On the home page, tap "Add Device - WiFi" and choose one of 3 methods: scan QR code, Bluetooth mode, or WiFi mode.

➤ Connected devices appear in "My Devices"; offline devices show as gray.

3.3 Device Details Page

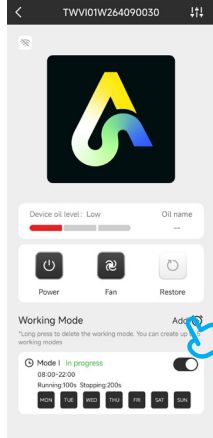

More Settings:

Customize the device name, set an avatar, create a connection password, or remove connected devices.

Status & Timer:

 **Oil level:** Displays current oil volume; scent name can be customized.

 **Power switch:** One-tap to turn the device on/off.

 **Fan switch:** One-tap to turn the fan on/off.

 **Factory reset:** One-tap to restore default settings.

Work Modes:

Tap "Add" to create up to 5 modes. Toggle the switch to enable/disable;


long press to delete. Tap a mode to edit:

Week Selection: Tap to select applicable days.

Time Slots: Swipe the dial to set work times. Note: Overnight schedules (e.g., 23:00–02:00) must be split into two segments: 23:00–23:59 and 00:00–02:00.


Frequency: Swipe the dial to set pump run/pause cycles.

3.4 Group Management & Personal Center

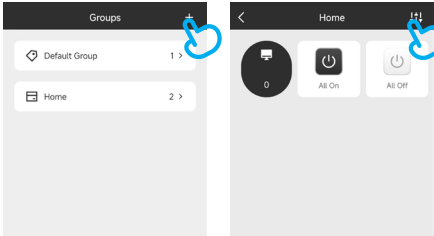

- Group Management:**
- Devices are automatically added to the "Default Group" after connection. Create custom groups for unified management:
 - Toggle all devices in the group on/off.
 - Rename, delete groups, or remove devices.
 - Batch share devices, set work modes, and customize scent names.
 - Add ungrouped devices to the group.

3.5 Personal Center:

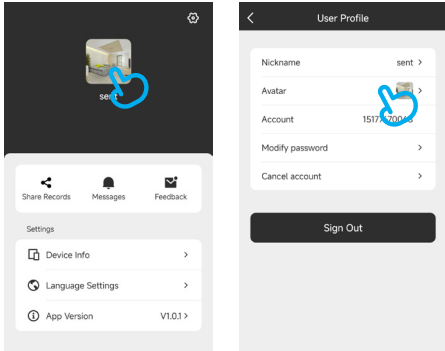

- Edit personal information via avatar.
- View sharing records, manage message notifications, and submit feedback.
- Access device info, user guides, and warranty terms.
- Switch languages and check app version.

4 Oil Consumption Chart

Grade	On time(s)	Pause time(s)	Consumption (g/h)
Minimum concentration	5s	600s	0.09
Medium concentration	50s	200s	2.17
Maximum concentration	150s	200s	4.66
100% Text	Continuous On	0	10.87

Note: Data tested with Park Hyatt essential oil (density ≈0.95). Consumption varies by oil type; for reference only.

5 Maintenance

Regular Cleaning (Every 1–2 Months):

Nozzle Cleaning: Wipe the nozzle with a 95% alcohol-dampened cotton swab to remove oil residue.

Atomizing Core Cleaning: Scrub with an alcohol-dampened swab or soak in alcohol, then air-dry.

Oil Bottle Cleaning: Clean with alcohol and fully dry before switching to a different oil type.

Long-Term Storage:

Add 95% industrial alcohol to the empty bottle.

Run the device for 10–15 minutes.

Drain the alcohol, air-dry the bottle, and reassemble.

Unplug the power cord to avoid electrostatic damage.


6 Atomizing Core Replacement

Twist out the oil bottle, pull out the oil suction tube.

Use tweezers to remove the old atomizing core.

Install the new core, reinsert the suction tube (align with the core hole), and reassemble all parts.

Note: Ensure all parts are tightly secured to prevent falling off.

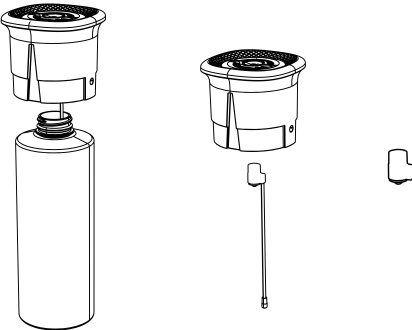

7 Warranty Terms

Warranty Period: 1 year from the date of purchase.

Free Warranty Coverage: Manufacturing defects under normal use; covers service and parts (excludes essential oil consumables).

Claims Process: Contact after-sales service within the warranty period and provide a valid warranty card and original/copy of the commercial invoice.

Exclusions from Free Warranty:

- Damage from accidents (fire, earthquake, dropping, etc.).
- Malfunctions caused by improper operation or unsuitable environments.
- Damage from unauthorized repairs or part replacements.
- Damage during transportation after delivery.
- Invalid or altered warranty documents.
- Lack of regular maintenance and cleaning.
- Overload operation beyond specifications.
- Non-genuine products, consumables, or parts.
- Products sold through unauthorized channels.
- Devices sent for repair without prior confirmation with the manufacturer.

 **Safety Precautions**

General Safety

- Keep the device upright at all times after adding oil; tilting or inverting may damage internal components.
- Empty the oil bottle before transportation to avoid leaks and device damage.
- Not for humidification; do not add water.
- Keep out of reach of children and pets.
- Store in a dry, cool place; avoid high temperatures or humidity.

Prohibited Actions

- Do not cover the device during operation.
- Do not use overloaded power sockets, damaged cords, or plugs (risk of device damage or fire).
- Do not ingest essential oil; avoid eye contact. Rinse with plenty of water if contact occurs; seek medical help if irritation persists.
- Do not disassemble the device. Contact after-sales service if any abnormality is found.

User Manual

Smart Scent Diffuser



Scent machine



[Please read the manual carefully before use and keep it properly]